HomeLink.
BY JOHNSON CONTROLS
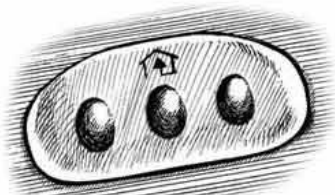
PRIMARY CodeDodger & Homelink

NOTE: IT IS EASIER TO PROGRAM A HOMELINK
EQUIPPED VEHICLE WITH TWO PEOPLE

START by going to the garage and look up at the bottom of the door operator to locate the control panel -

You MUST Have A PRIMARY Transmitter and these BUTTONS on the bottom of your OPERATOR

Purple / Blue Lights

✱ **GEN 1 RED LED**
✱ **GEN 2 AMBER LED**

- AT THE CAR -

Hold the PRIMARY tx 4 inches from the Homelink system - Press & hold the PRIMARY tx button & teh appropriate Homelink button until the icon light changes on the Homelink

- AT THE OPERATOR IN THE GARAGE -

Press and hold SQUARE button until both BLUE lights come on

Release SQUARE button and wait for ROUND BLUE light

Press & release SQUARE button, see long PURPLE light flash

IMMEDIATELY press teh appropriate HOMELINK button 4 TIMES

The HOMELINK button should work now

**GEN 3 OVAL LED
WORKS ON 315/390**

**GEN 4 TRIPLE OVAL LED
WORKS ON 315/390**